



ECOMAX & EcoTank Water Backflow Prevention through Air Gap

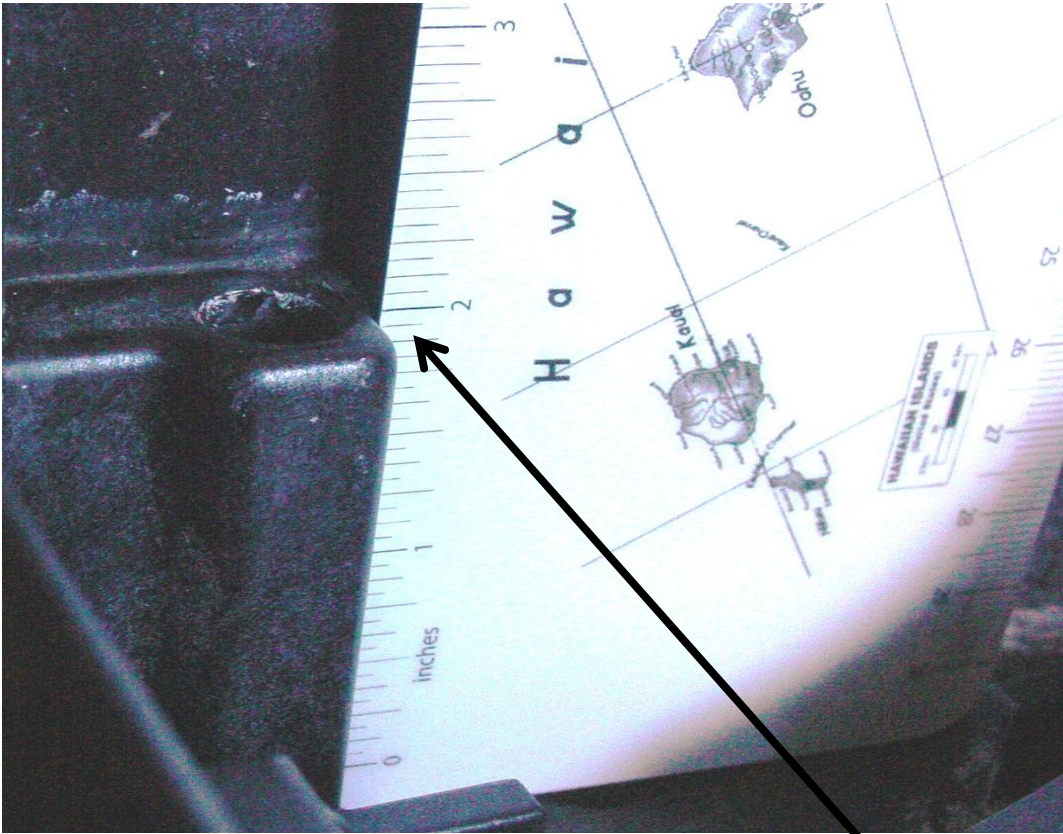

Overflow in the water section of the ECOMAX & EcoTank is at 2".

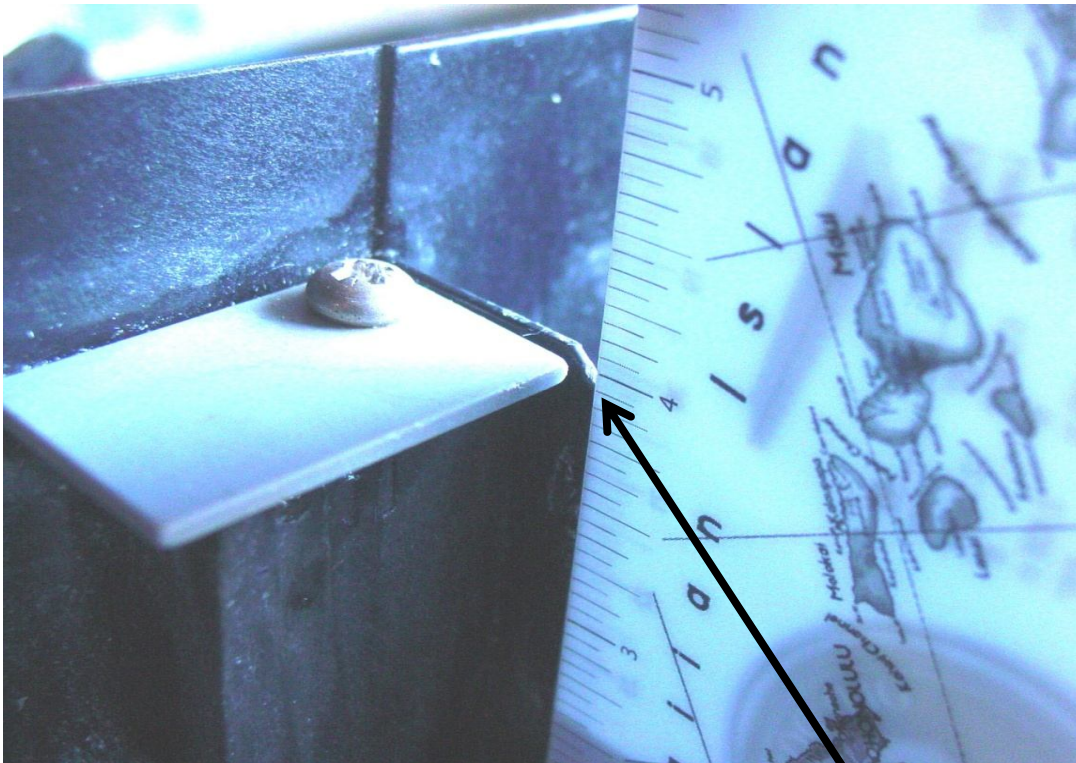

Inflow in the water section of the ECOMAX & EcoTank is at 4".

There is a minimum of a 1.5" air gap between the water inflow and water overflow in both the ECOMAX and EcoTank processors.



FI Sales, LLC®
761 N. 17th St., #17
St. Charles, IL 60174 USA
(630) 444-1380 Fax: (630) 444-1381

Visit FI Sales online at
www.fisalesllc.com
or email us at
sales@fisalesllc.com